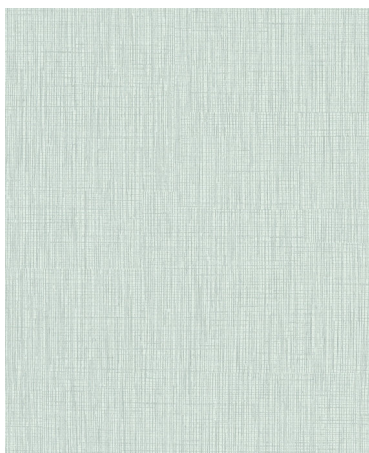


**SE | PVC Free****CLEANING CODE**

CFC: Coated Fabrics Cleaning - When a spill/stain occurs wipe immediately with a clean dry cloth. Carefully remove the majority of the stain then follow the steps below.

Soap & Water - Remove ordinary dirt and smudges with a mild soap and water solution using a soft cloth or towel. Rinse with fresh water and wipe dry.

Non-abrasive Cleaners - If residue remains, use a straight application of the following cleaners: Fantastik or 409 and gently clean with a soft cloth. Rinse with fresh water and wipe dry.

Isopropyl Alcohol - More stubborn stains may be eliminated using a cotton cloth soaked in 70-91% isopropyl (rubbing) alcohol. Wipe without spreading stain to surrounding area. A second application should be applied with vigorous rubbing in a circular motion. For highly textured material, a soft brush is recommended to clean valleys and crevices. Rinse with fresh water and wipe dry.

BC: Bleach Cleanable - 1 parts bleach, 4 parts water = 20% bleach, 80% water solution. Do not clean / disinfect fabric for longer than 10 minutes using the 20% bleach solution. Always rinse promptly with clean water after applying the bleach solution. Failure to do so will void any and all warranties.

Write-Away products from Mayer Fabrics defies unsightly ink spots and paint stains. Take action 'right away' on Write-Away products by following the cleaning instructions for Ink Stains. Always rinse thoroughly with clean water.

Please note: If specific cleaners are not listed, then the pattern has not been tested for cleaning solution compatibility.

**DISINFECTANTS AND CLEANERS**

ACCEL PREVENTION CONCENTRATE – Approved - No Effect

ACCEL TB – Approved - No Effect

BIREX SE DISINFECTANT – Approved - Slight Effect

CAVIWIPES – Approved - Slight Effect

CITRACE GERMACIDE – Approved - Slight Effect

CLOROX DISINFECTING WIPE – Approved - Slight Effect  
CLOROX HEALTHCARE BLEACH GERMICIDAL WIPE – Approved - Slight Effect  
CLOROX HEALTHCARE EZ-KILL QUAT ALCOHOL CLEANER DIS... – Approved - Slight Effect  
CLOROX HYDROGEN PEROXIDE CLEANER DISINFECTANT SPRA... – Approved - No Effect  
CLOROX HEALTHCARE HYDROGEN PEROXIDE CLEANER DISINF... – Approved - No Effect  
ECOLAB NEUTRAL DISINFECTANT CLEANER – Approved - No Effect  
FADE-A-DYNE II – Approved - Slight Effect  
FANTASTIK ALL PURPOSE CLEANER – Approved - No Effect  
FORMULA 409 ALL PURPOSE CLEANER – Approved - Slight Effect  
GREEN WORKS ALL PURPOSE CLEANER – Approved - No Effect  
ISOPROPYL ALCOHOL – Approved - No Effect  
LYSOL FOAMING – Approved - Slight Effect  
LYSOL SPRAY DISINFECTANT – Approved - No Effect  
OASIS 146 MULTI-QUAT SANITIZER – Approved - No Effect  
OASIS 144 QUAT SANITIZER – Approved - No Effect  
OPTIM 33 TB DISINFECTANT (ALTERNATE FOR ACCEL TB) – Approved - Slight Effect  
OXYCIDE DAILY DISINFECTANT CLEANER – Approved - No Effect  
PERISEPT 62 SPORICIDAL DISINFECTANT – Approved - No Effect  
PURELL FOOD SERVICE SANITIZER – Approved - No Effect  
SUPER SANI CLOTH GERMICIDAL WIPES (PURPLE LID) – Approved - No Effect  
SANI CLOTH HB GERMICIDAL WIPES (GREEN LID) – Approved - No Effect  
SANI-PROFESSIONAL MULTI SURFACE WIPES – Approved - No Effect  
SANI-PROFESSIONAL TABLE TURNERS WIPES – Approved - No Effect  
SANIZIDE PLUS SURFACE DISINFECTANT SPRAY – Approved - Slight Effect  
SIMPLE GREEN (1:10 DILUTION) – Approved - Slight Effect  
SANI CLOTH AF3 GERMICIDAL WIPES (GREY LID) – Approved - No Effect  
VIREX II 256- CONCENTRATE – Approved - No Effect  
VIROX 5 CONCENTRATE (1:256 DILUTION; CN PRODUCT) – Approved - No Effect  
VIROX AHP 5 DISINFECTANT CLEANER SURFACE WIPES – Approved - Slight Effect  
ASEPTICARE TB-II – Not Approved - Severe Effect  
CAVICIDE – Not Approved - Severe Effect  
CLOROX BROAD SPECTRUM QUATERNARY DISINFECTANT CLEA... – Not Approved - Severe Effect  
OXIVIR TB – Approved - No Effect  
SANI CLOTH PLUS GERMICIDAL WIPES (RED LID) – Not Approved - Severe Effect  
SANI CLOTH BLEACH GERMICIDAL WIPES (ORANGE LID) – Not Approved - Severe Effect  
WEX-CIDE 128 CLEANER – Not Approved - Severe Effect  
BLEACH (RATIO OF WATER TO BLEACH) See the bleach c... – Approved - No Effect  
OXIVIR FIVE 16 – Approved - No Effect  
OXIVIR TB WIPES – Approved - No Effect  
VIREX PLUS ONE-STEP DISINFECTANT CLEANER & DEODERI... – Approved - No Effect  
VIROX 5 RTU (CN PRODUCT) – Approved - Slight Effect  
EVACLEAN PURTABS – Approved - No Effect  
SIMPLE GREEN TOWELS – Approved - Slight Effect  
MAXIM FACILITY + ONE-STEP DISINFECTANT CLEANER AND... – Approved - No Effect

3M HB QUAT DISINFECTANT CLEANER CONCENTRATE 25L – Approved - No Effect

OXIVIR 1 WIPES – Approved - No Effect

ECOLAB DISINFECTANT 1 WIPE – Approved - No Effect

SANI CLOTH PRIME GERMICIDAL WIPES (FUCHSIA LID) – Approved - No Effect

KEY	DEFINITION
<b>Approved   No Effect</b>	No change in color or surface finish.
<b>Approved   Slight Effect</b>	A change in color or surface finish only visible at certain angles.
<b>Approved   Moderate Effect</b>	A change in color or surface finish visible from all angles and directions, but does not appreciably alter the original condition of the material.
<b>Not Approved   Severe Effect</b>	A change in color or surface finish, which obviously and markedly alters the original condition of the specimen.

The results for the cleaners/disinfectants listed does not imply "approved" or that the results are guaranteed. These evaluations are indicators after laboratory testing and may not be indicative of field performance. Customers should first determine if products are appropriate for use on their surfaces. The majority of today's disinfectant chemistries are mainly designed for use on hard environmental surfaces such as ceramic, porcelain, laminate, steel etc. After each application these types of disinfectants on seating surfaces the surface must be wiped with clean water and dried with a clean towel to remove any chemical residue that could eventually discolor or degrade the material surface.

Failure to follow the above dilution recommendations, directions when using using these types of cleaners/disinfectants or the application of a clean water rinse after each application can expedite a product failure and will void any warranty claim.