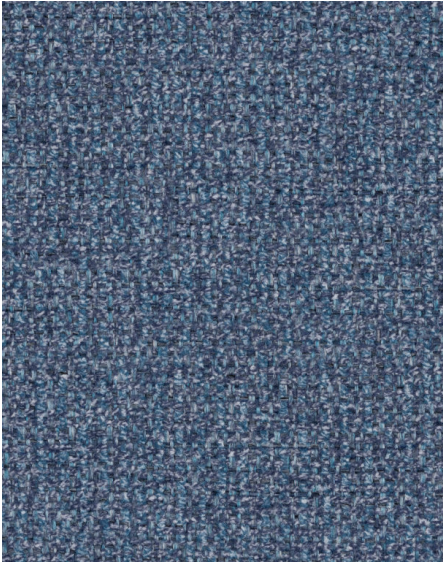


723 | Woven Crypton**CLEANING CODE**

C: Crypton Cleaning - Crypton fabrics are available in various fiber types, and all Crypton fabrics can be cleaned with soap and water. For the best cleaning solution, use CRYPTON UPHOLSTERY CLEANER, available from Mayer Fabrics.

W: Water-Based Cleaner - Spot clean, using the foam only from a water-based cleaning agent, such as a mild detergent or non-solvent upholstery shampoo product. Apply foam with a soft brush in a circular motion. Always rinse promptly with clean water. Vacuum when dry. Pretest small area before proceeding.

BC: Bleach Cleanable - 1 parts bleach, 9 parts water = 10% bleach, 90% water solution. Do not clean / disinfect fabric for longer than 10 minutes using the 10% bleach solution. Always rinse promptly with clean water after applying the bleach solution. Failure to do so will void any and all warranties.

Please note: If specific cleaners are not listed, then the pattern has not been tested for cleaning solution compatibility.

DISINFECTANTS AND CLEANERS

3M NEUTRAL QUAT – Approved - No Effect

ACCEL TB – Approved - No Effect

ASEPTICARE – Approved - No Effect

BLEACH (RATIO OF WATER TO BLEACH) See the bleach c... – Approved - No Effect

CAVIWIPES XL – Approved - No Effect

CAVICIDE – Approved - No Effect

CAVIWIPES – Approved - No Effect

CAVIWIPES 1 – Approved - No Effect

CLOROX DISINFECTING WIPE – Approved - No Effect

FEBREZE FABRIC REFRESHER EXTRA STRENGTH – Approved - No Effect
FORMULA 409 ALL PURPOSE CLEANER – Approved - No Effect
HYDROGEN PEROXIDE – Approved - No Effect
OASIS 146 MULTI-QUAT SANITIZER – Approved - No Effect
OXIVIR TB – Approved - No Effect
OXYCIDE DAILY DISINFECTANT CLEANER – Approved - No Effect
SUPER SANI CLOTH GERMICIDAL WIPES (PURPLE LID) – Approved - No Effect
VIRASEPT – Approved - No Effect
VIREX TB- RTU (not for cellulosic & nylon fabrics) – Approved - No Effect
VIROX 5 RTU (CN PRODUCT) – Approved - No Effect
WEX-CIDE 128 CLEANER – Approved - No Effect
LYSOL DISINFECTING WIPES – Approved - No Effect
CITRUS H2O 2 – Approved - No Effect
CRYPTON GOLD – Approved - No Effect
CRYPTON PURPLE – Approved - No Effect
DISCIDE – Approved - No Effect
GREASED LIGHTENING (not for cellulosic & nylon fab... – Approved - No Effect
SCOTCHGARD OXY – Approved - No Effect
TEFLON CARPET & UPHOLSTERY – Approved - No Effect
WINDEX MULTI SURFACE CLEANER (not for cellulosic &... – Approved - No Effect
CRYPTON DISINFECTANT & DEODORIZER – Approved - No Effect

KEY	DEFINITION
Approved No Effect	No change in color or surface finish.
Approved Slight Effect	A change in color or surface finish only visible at certain angles.
Approved Moderate Effect	A change in color or surface finish visible from all angles and directions, but does not appreciably alter the original condition of the material.
Not Approved Severe Effect	A change in color or surface finish, which obviously and markedly alters the original condition of the specimen.

The results for the cleaners/disinfectants listed does not imply "approved" or that the results are guaranteed. These evaluations are indicators after laboratory testing and may not be indicative of field performance. Customers should first determine if products are appropriate for use on their surfaces. The majority of today's disinfectant chemistries are mainly designed for use on hard environmental surfaces such as ceramic, porcelain, laminate, steel etc. After each application these types of disinfectants on seating surfaces the surface must be wiped with clean water and dried with a clean towel to remove any chemical residue that could eventually discolor or degrade the material surface.

Failure to follow the above dilution recommendations, directions when using using these types of cleaners/disinfectants or the application of a clean water rinse after each application can expedite a product failure and will void any warranty claim.