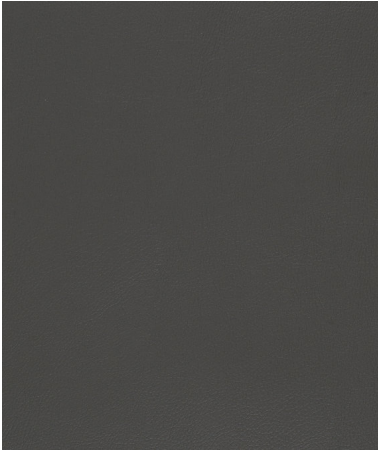


DUR | Faux Leather**CLEANING CODE**

WS: Water/Solvent Cleaner - Spot clean with a mild solvent, an upholstery shampoo, or the foam from a mild detergent. When using a solvent or dry cleaning product, follow instructions carefully and clean only in a well-ventilated room. Avoid any product that contains carbon tetrachloride or other toxic materials. With either method, pretest a small area before proceeding. Always rinse promptly with clean water.

CFC: Coated Fabrics Cleaning - When a spill/stain occurs wipe immediately with a clean dry cloth. Carefully remove the majority of the stain then follow the steps below.

Soap & Water - Remove ordinary dirt and smudges with a mild soap and water solution using a soft cloth or towel. Rinse with fresh water and wipe dry.

Non-abrasive Cleaners - If residue remains, use a straight application of the following cleaners: Fantastik or 409 and gently clean with a soft cloth. Rinse with fresh water and wipe dry.

Isopropyl Alcohol - More stubborn stains may be eliminated using a cotton cloth soaked in 70-91% isopropyl (rubbing) alcohol. Wipe without spreading stain to surrounding area. A second application should be applied with vigorous rubbing in a circular motion. For highly textured material, a soft brush is recommended to clean valleys and crevices. Rinse with fresh water and wipe dry.

BC: Bleach Cleanable - 1 parts bleach, 9 parts water = 10% bleach, 90% water solution. Do not clean / disinfect fabric for longer than 10 minutes using the 10% bleach solution. Always rinse promptly with clean water after applying the bleach solution. Failure to do so will void any and all warranties.

Please note: If specific cleaners are not listed, then the pattern has not been tested for cleaning solution compatibility.

DISINFECTANTS AND CLEANERS

ASEPTICARE – Approved - No Effect

ASEPTICARE TB-II – Approved - No Effect

AVERT SPRACIDAL DISINFECTANT CLEANER – Approved - No Effect

BIREX SE DISINFECTANT – Approved - No Effect
BLEACH-RITE DISINFECTING SPRAY – Approved - No Effect
CAVICIDE – Approved - No Effect
CAVICIDE 1 – Approved - No Effect
CITRACE GERMACIDE – Approved - No Effect
CLOROX BROAD SPECTRUM QUATERNARY DISINFECTANT CLEA... – Approved - No Effect
CLOROX HEALTHCARE BLEACH GERMICIDAL CLEANER – Approved - No Effect
CLOROX HEALTHCARE BLEACH GERMICIDAL WIPE – Approved - No Effect
CLOROX HEALTHCARE EZ-KILL QUAT ALCOHOL CLEANER DIS... – Approved - No Effect
CLOROX HEALTHCARE VERSASURE CLEANER DISINFECTANT W... – Approved - No Effect
CLOROX HYDROGEN PEROXIDE CLEANER DISINFECTANT SPRA... – Approved - No Effect
CLOROX HEALTHCARE HYDROGEN PEROXIDE CLEANER DISINF... – Approved - No Effect
DISPATCH HOSPITAL CLEANER DISINFECTANT WITH BLEACH – Approved - No Effect
FADE-A-DYNE II – Approved - No Effect
FANTASTIK ALL PURPOSE CLEANER – Approved - No Effect
FORMULA 409 ALL PURPOSE CLEANER – Approved - No Effect
FRESH BREEZE TB DETERGENTS – Approved - No Effect
ISOPROPYL ALCOHOL – Approved - No Effect
LYSOL SPRAY DISINFECTANT – Approved - No Effect
OPTIM 33 TB DISINFECTANT (ALTERNATE FOR ACCEL TB) – Approved - No Effect
OXIVIR 1 RTU – Approved - No Effect
OXIVIR TB – Approved - No Effect
OXYCIDE DAILY DISINFECTANT CLEANER – Approved - No Effect
SANI CLOTH PLUS GERMICIDAL WIPES (RED LID) – Approved - No Effect
SUPER SANI CLOTH GERMICIDAL WIPES (PURPLE LID) – Approved - No Effect
SANI CLOTH HB GERMICIDAL WIPES (GREEN LID) – Approved - No Effect
SANIZIDE PLUS SURFACE DISINFECTANT SPRAY – Approved - No Effect
SANI CLOTH AF3 GERMICIDAL WIPES (GREY LID) – Approved - No Effect
SANI CLOTH BLEACH GERMICIDAL WIPES (ORANGE LID) – Approved - No Effect
VIREX II 256- CONCENTRATE – Approved - No Effect
VIREX PLUS ONE-STEP DISINFECTANT CLEANER & DEODERI... – Approved - Slight Effect
VIROX 5 CONCENTRATE (1:256 DILUTION; CN PRODUCT) – Approved - No Effect
VIROX 5 RTU (CN PRODUCT) – Approved - No Effect
VIROX AHP 5 DISINFECTANT CLEANER SURFACE WIPES – Approved - No Effect
WEX-CIDE 128 CLEANER – Approved - No Effect
CAVIWIPES XL – Approved - No Effect
SANI-PROFESSIONAL MULTI SURFACE WIPES – Approved - No Effect
POWER QUAT – Approved - No Effect
NLV-2 DISINFECTANT CLEANER & VIRUCIDE – Approved - No Effect
SANI-HYPERCIDE GERMICIDAL SPRAY – Approved - No Effect
SANI-24 GERMICIDAL SPRAY – Approved - No Effect
SANI-PRIME GERMICIDAL SPRAY – Approved - No Effect
SUPER HDQ L 10 – Approved - No Effect
STERI-7 XTRA CONCENTRATE (recommended dilution rat... – Approved - No Effect

STERI-7 XTRA WIPES – Approved - No Effect
TB-CIDE QUAT – Approved - No Effect
VERT-2 GO ED – Approved - No Effect
VITAL OXIDE – Approved - No Effect
CONCEPT 256N – Approved - No Effect
HALOMIST – Approved - No Effect
EVACLEAN PURTABS 500ppm – Approved - No Effect
KENNELSOL – Approved - No Effect
J-512 SANITIZER – Approved - No Effect
ERC PERFORMANCE WIPES – Approved - No Effect
AVISTAT-D RTU SPRAY DISINFECTANT CLEANER – Approved - No Effect
HEPASTAT 256 – Approved - No Effect
PURELL MULTI SURFACE DISINFECTANT – Approved - No Effect
PURELL HEALTHCARE SURFACE DISINFECTANT – Approved - No Effect
CLOROX HEALTHCARE FUZION CLEANER DISINFECTANT – Approved - No Effect
ECOLAB PEROXIDE MULTI SURFACE CLEANER AND DISINFEC... – Approved - No Effect
ECOLAB PEROXIDE MULTI SURFACE CLEANER AND DISINFEC... – Approved - No Effect
PERISEPT 62 SPORICIDAL DISINFECTANT – Approved - No Effect
REJUVENATE RTU WIPES ONE STEP – Approved - No Effect
CLEAN ON THE GO HDQ C2 NEUTRAL DISINFECTANT – Approved - No Effect
RE-JUV-NAL – Approved - No Effect
BLEACH (RATIO OF WATER TO BLEACH) See the bleach c... – Approved - No Effect
OXIVIR TB WIPES – Approved - No Effect
3M DISINFECTANT CLEANER RCT CONCENTRATE – Approved - Slight Effect
3M HB QUAT DISINFECTANT CONCENTRATE – Approved - No Effect
3M HB QUAT DISINFECTANT CLEANER CONCENTRATE 25L – Approved - No Effect
ALPHA HP MULTI-SURGACE DISINFECTANT – Approved - No Effect
GENESAN'S CONTACT PLUS DISINFECTANT – Approved - No Effect
CAVIWIPES HP – Approved - No Effect
Array Quat-Clean – Approved - No Effect
DIVERSEY ACCEL PREvention CONCENTRATE – Approved - No Effect
ECOLAB DISINFECTANT 1 WIPE – Not Approved - Severe Effect
SANI CLOTH PRIME GERMICIDAL WIPES (FUCHSIA LID) – Approved - No Effect
LYSOL DISINFECTING WIPES – Approved - No Effect
OXIVIR THREE 64 – Approved - No Effect

KEY	DEFINITION
Approved No Effect	No change in color or surface finish.
Approved Slight Effect	A change in color or surface finish only visible at certain angles.
Approved Moderate Effect	A change in color or surface finish visible from all angles and directions, but does not appreciably alter the original condition of the material.
Not Approved Severe Effect	A change in color or surface finish, which obviously and markedly alters the original condition of the specimen.

The results for the cleaners/disinfectants listed does not imply "approved" or that the results are guaranteed. These evaluations are indicators after laboratory testing and may not be indicative of field performance. Customers should first determine if products are appropriate for use on their surfaces. The majority of today's disinfectant chemistries are mainly designed for use on hard environmental surfaces such as ceramic, porcelain, laminate, steel etc. After each application these types of disinfectants on seating surfaces the surface must be wiped with clean water and dried with a clean towel to remove any chemical residue that could eventually discolor or degrade the material surface.

Failure to follow the above dilution recommendations, directions when using using these types of cleaners/disinfectants or the application of a clean water rinse after each application can expedite a product failure and will void any warranty claim.