


## EH | Vinyl

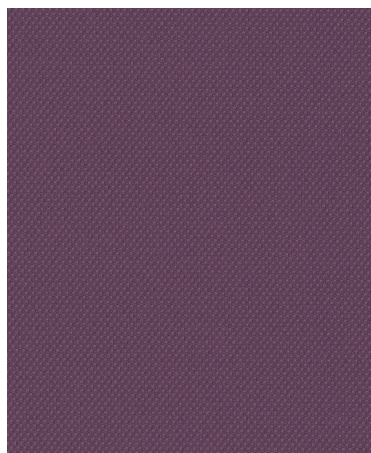

## CLEANING CODE

CFC: Coated Fabrics Cleaning - When a spill/stain occurs wipe immediately with a clean dry cloth. Carefully remove the majority of the stain then follow the steps below.

Soap & Water - Remove ordinary dirt and smudges with a mild soap and water solution using a soft cloth or towel. Rinse with fresh water and wipe dry.

Non-abrasive Cleaners - If residue remains, use a straight application of the following cleaners: Fantastik or 409 and gently clean with a soft cloth. Rinse with fresh water and wipe dry.

Isopropyl Alcohol - More stubborn stains may be eliminated using a cotton cloth soaked in 70-91% isopropyl (rubbing) alcohol. Wipe without spreading stain to surrounding area. A second application should be applied with vigorous rubbing in a circular motion. For highly textured material, a soft brush is recommended to clean valleys and crevices. Rinse with fresh water and wipe dry.

BC: Bleach Cleanable - 1 parts bleach, 9 parts water = 10% bleach, 90% water solution. Do not clean / disinfect fabric for longer than 10 minutes using the 10% bleach solution. Always rinse promptly with clean water after applying the bleach solution. Failure to do so will void any and all warranties.

Please note: If specific cleaners are not listed, then the pattern has not been tested for cleaning solution compatibility.

## DISINFECTANTS AND CLEANERS

ACCEL PREVENTION CONCENTRATE – Approved - Slight Effect

ACCEL TB – Approved - No Effect

BIREX SE DISINFECTANT – Approved - Slight Effect

CAVIWIPES – Approved - Slight Effect

CITRACE GERMACIDE – Approved - Slight Effect

CLOROX DISINFECTING WIPE – Approved - No Effect

CLOROX HEALTHCARE BLEACH GERMICIDAL WIPE – Approved - Slight Effect

CLOROX HEALTHCARE EZ-KILL QUAT ALCOHOL CLEANER DIS... – Approved - Slight Effect

CLOROX HYDROGEN PEROXIDE CLEANER DISINFECTANT SPRA... – Approved - No Effect  
 CLOROX HEALTHCARE HYDROGEN PEROXIDE CLEANER DISINF... – Approved - Slight Effect  
 ECOLAB NEUTRAL DISINFECTANT CLEANER – Approved - No Effect  
 FADE-A-DYNE II – Approved - Slight Effect  
 FANTASTIK ALL PURPOSE CLEANER – Approved - No Effect  
 FORMULA 409 ALL PURPOSE CLEANER – Approved - Slight Effect  
 GREEN WORKS ALL PURPOSE CLEANER – Approved - No Effect  
 ISOPROPYL ALCOHOL – Approved - No Effect  
 LYSOL FOAMING – Approved - No Effect  
 LYSOL SPRAY DISINFECTANT – Approved - No Effect  
 OASIS 146 MULTI-QUAT SANITIZER – Approved - No Effect  
 OASIS 144 QUAT SANITIZER – Approved - No Effect  
 OPTIM 33 TB DISINFECTANT (ALTERNATE FOR ACCEL TB) – Approved - Slight Effect  
 OXIVIR TB – Approved - No Effect  
 OXYCIDE DAILY DISINFECTANT CLEANER – Approved - No Effect  
 PERISEPT 62 SPORICIDAL DISINFECTANT – Approved - No Effect  
 PURELL FOOD SERVICE SANITIZER – Approved - No Effect  
 SUPER SANI CLOTH GERMICIDAL WIPES (PURPLE LID) – Approved - Slight Effect  
 SANI CLOTH HB GERMICIDAL WIPES (GREEN LID) – Approved - No Effect  
 SANI-PROFESSIONAL MULTI SURFACE WIPES – Approved - Slight Effect  
 SANI-PROFESSIONAL TABLE TURNERS WIPES – Approved - No Effect  
 SANIZIDE PLUS SURFACE DISINFECTANT SPRAY – Approved - Slight Effect  
 SIMPLE GREEN (1:10 DILUTION) – Approved - Slight Effect  
 SANI CLOTH AF3 GERMICIDAL WIPES (GREY LID) – Approved - No Effect  
 VIREX II 256- CONCENTRATE – Approved - No Effect  
 VIROX AHP 5 DISINFECTANT CLEANER SURFACE WIPES – Approved - No Effect  
 VIROX 5 CONCENTRATE (1:256 DILUTION; CN PRODUCT) – Approved - No Effect  
 VIROX 5 RTU (CN PRODUCT) – Approved - Slight Effect  
 ASEPTICARE TB-II – Not Approved - Severe Effect  
 CAVICIDE – Not Approved - Severe Effect  
 CLOROX BROAD SPECTRUM QUATERNARY DISINFECTANT CLEA... – Not Approved - Severe Effect  
 SANI CLOTH PLUS GERMICIDAL WIPES (RED LID) – Not Approved - Severe Effect  
 SANI CLOTH BLEACH GERMICIDAL WIPES (ORANGE LID) – Not Approved - Severe Effect  
 WEX-CIDE 128 CLEANER – Not Approved - Severe Effect  
 BLEACH (RATIO OF WATER TO BLEACH) See the bleach c... – Approved - No Effect  
 SUPER HDQ L 10 – Approved - No Effect  
 OXIVIR FIVE 16 – Approved - No Effect  
 OXIVIR TB WIPES – Approved - No Effect  
 VIREX PLUS ONE-STEP DISINFECTANT CLEANER & DEODERI... – Approved - No Effect  
 EVACLEAN PURTABS 500ppm – Approved - No Effect  
 SIMPLE GREEN TOWELS – Approved - No Effect  
 MAXIM FACILITY + ONE-STEP DISINFECTANT CLEANER AND... – Approved - No Effect  
 SANI CLOTH PRIME GERMICIDAL WIPES (FUCHSIA LID) – Approved - No Effect  
 3M HB QUAT DISINFECTANT CLEANER CONCENTRATE 25L – Approved - No Effect

OXIVIR 1 WIPES – Approved - No Effect

SPARTAN BNC-15 – Approved - No Effect

KEY	DEFINITION
Approved   No Effect	No change in color or surface finish.
Approved   Slight Effect	A change in color or surface finish only visible at certain angles.
Approved   Moderate Effect	A change in color or surface finish visible from all angles and directions, but does not appreciably alter the original condition of the material.
Not Approved   Severe Effect	A change in color or surface finish, which obviously and markedly alters the original condition of the specimen.

The results for the cleaners/disinfectants listed does not imply "approved" or that the results are guaranteed. These evaluations are indicators after laboratory testing and may not be indicative of field performance. Customers should first determine if products are appropriate for use on their surfaces. The majority of today's disinfectant chemistries are mainly designed for use on hard environmental surfaces such as ceramic, porcelain, laminate, steel etc. After each application these types of disinfectants on seating surfaces the surface must be wiped with clean water and dried with a clean towel to remove any chemical residue that could eventually discolor or degrade the material surface.

Failure to follow the above dilution recommendations, directions when using using these types of cleaners/disinfectants or the application of a clean water rinse after each application can expedite a product failure and will void any warranty claim.