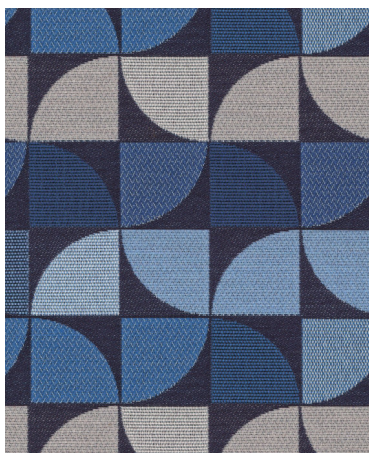


**965 | Woven Crypton****CLEANING CODE**

C: Crypton Cleaning - Crypton fabrics are available in various fiber types, and all Crypton fabrics can be cleaned with soap and water. For the best cleaning solution, use CRYPTON UPHOLSTERY CLEANER, available from Mayer Fabrics.

BC: Bleach Cleanable - 1 parts bleach, 9 parts water = 10% bleach, 90% water solution. Do not clean / disinfect fabric for longer than 10 minutes using the 10% bleach solution. Always rinse promptly with clean water after applying the bleach solution. Failure to do so will void any and all warranties.

Please note: If specific cleaners are not listed, then the pattern has not been tested for cleaning solution compatibility.

**RECOMMENDED CARE AND CLEANING STEPS**

Keeping surfaces clean is more important than ever, and it has always been important to Crypton. But Crypton goes beyond clean.

Crypton Fabric offers an antimicrobial & stain-resistant technology and an integrated, permanent liquid barrier. Crypton's patented moisture barrier is proven to prevent solids and liquids from permeating to the cushion below – allowing Crypton fabric to be cleaned and disinfected.

Clean is good but disinfected is better.

While cleaning and disinfecting are sometimes performed in the same step, there are noteworthy differences. Cleaning is the apparent removal of liquid and food contaminants, while disinfecting is the elimination / killing of microorganisms that can survive in the presence of moisture and food sources that are not visible to the human eye. It is possible for a surface to appear clean but not be disinfected.

Crypton's EPA-approved Disinfectant & Deodorizer with Crypton Barrier Fabrics is an engineered system of disinfection for

high-use, high-abuse settings. EPA-registered, one-step disinfectant cleaner, Crypton's Disinfectant is effective against a broad spectrum of bacteria, viruses, mold, mildew and fungus, and disinfects hard, non-porous surfaces including Crypton barrier fabrics.

Is it effective against COVID-19? Yes. The EPA has announced its Emerging Pathogen Policy which states that since our disinfectant kills a similar 'common corona virus' it is thought to kill the emerging (new) pathogen.

To disinfect Crypton, the Disinfectant & Deodorizer must remain on the fabric for a period of time. The time required varies the type of microorganism, though 5 to 10 minutes is best. Directions to clean and disinfect Crypton fabric with liquid barrier with its EPA-registered Disinfectant:

- 1.Remove spills with an absorbent cloth or paper towel. If needed, clean heavily soiled areas with soap and water.
- 2.Remove excess moisture and soap via vacuum extraction or wiping with a clean, dry cloth. Remove all soap so that it does not attract soil
- 3.Apply Crypton's Disinfectant & Deodorizer 6-8 inches from surface (and please do not inhale)
- 4.Allow surface to remain wet for 10 minutes for best results
- 5.After 10 minutes, wipe dry or allow to air dry
- 6.Rinse hard, non-pours food contact surface with water after application.

Crypton offers the ability to clean and disinfect your fabric – ensuring permanent resistance to odors, mold and mildew, making Crypton the sustainable choice to help protect both your environment and your investment.

## DISINFECTANTS AND CLEANERS

CAVIWIPES – Approved - No Effect

CAVIWIPES 1 – Approved - No Effect

CAVIWIPES XL – Approved - No Effect

3M NEUTRAL QUAT – Approved - No Effect

ACCEL TB – Approved - No Effect

ASEPTICARE – Approved - No Effect

CAVICIDE – Approved - No Effect

CLOROX DISINFECTING WIPE – Approved - No Effect

FEBREZE FABRIC REFRESHER EXTRA STRENGTH – Approved - No Effect

FORMULA 409 ALL PURPOSE CLEANER – Approved - No Effect

HYDROGEN PEROXIDE – Approved - No Effect

OASIS 146 MULTI-QUAT SANITIZER – Approved - No Effect

OXIVIR TB – Approved - No Effect

OXYCIDE DAILY DISINFECTANT CLEANER – Approved - No Effect

SUPER SANI CLOTH GERMICIDAL WIPES (PURPLE LID) – Approved - No Effect

VIRASEPT – Approved - No Effect

VIREX TB- RTU (not for cellulosic & nylon fabrics) – Approved - No Effect

VIROX 5 RTU (CN PRODUCT) – Approved - No Effect

WEX-CIDE 128 CLEANER – Approved - No Effect

LYSOL DISINFECTING WIPES – Approved - No Effect

CITRUS H2O 2 – Approved - No Effect

CRYPTON GOLD – Approved - No Effect

CRYPTON PURPLE – Approved - No Effect

DISCIDE – Approved - No Effect

GREASED LIGHTENING (not for cellulosic & nylon fab... – Approved - No Effect

SCOTCHGARD OXY – Approved - No Effect

TEFLON CARPET & UPHOLSTERY – Approved - No Effect

WINDEX MULTI SURFACE CLEANER (not for cellulosic &... – Approved - No Effect

CRYPTON DISINFECTANT & DEODORIZER – Approved - No Effect

BLEACH (RATIO OF WATER TO BLEACH) See the bleach c... – Approved - No Effect

KEY	DEFINITION
Approved   No Effect	No change in color or surface finish.
Approved   Slight Effect	A change in color or surface finish only visible at certain angles.
Approved   Moderate Effect	A change in color or surface finish visible from all angles and directions, but does not appreciably alter the original condition of the material.
Not Approved   Severe Effect	A change in color or surface finish, which obviously and markedly alters the original condition of the specimen.

The results for the cleaners/disinfectants listed does not imply "approved" or that the results are guaranteed. These evaluations are indicators after laboratory testing and may not be indicative of field performance. Customers should first determine if products are appropriate for use on their surfaces. The majority of today's disinfectant chemistries are mainly designed for use on hard environmental surfaces such as ceramic, porcelain, laminate, steel etc. After each application these types of disinfectants on seating surfaces the surface must be wiped with clean water and dried with a clean towel to remove any chemical residue that could eventually discolor or degrade the material surface.

Failure to follow the above dilution recommendations, directions when using using these types of cleaners/disinfectants or the application of a clean water rinse after each application can expedite a product failure and will void any warranty claim.